

Lumex

Projecting Smart Ideas


BeamPod



User Manual













General Safety Information

1. Keep the device and packaging materials out of reach of infants and children.
2. Keep the power adapter and other contacts from water, Dry your hands before use, do not place objects filled with liquids such as Drinks, etc. on or near the device.
3. If your Power Fluctuates, Plug into a certified Surge Protector
4. Keep your device away from all open flames i.e. Candles.
5. Keep the unit at least 4 inches (10 cm) away from other objects.
Do not block the ventilation on the unit, Keep away from Newspapers tablecloths or curtains etc.
6. Relative Humidity should be at 25% ~ 80%, non-condensing.
7. The battery is integrated with the device. Do not disassemble or modify. The battery should be replaced by a Lumex authorized service center.
8. Ensure that the ambient room temperature is within 40 - 95°F (35 - 35°C).
9. Under normal use the Projector may get Warm
10. Wait before use if the device has been moved from a cold location into a warm one. Any condensation that has formed may damage the device.
11. Handle the product with care. Avoid contact with sharp objects. Keep device away from metallic objects.
12. Place the projector on a flat surface. Any collision or falling is likely to damage the product.
13. Do not drop or disassemble the product it may void the warranty. Opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to an authorized service center.

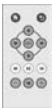14. Only use the accessories supplied by the manufacturer.
15. Avoid looking directly into the projector's lens. 
16. The device should not be used in a dusty environment. Dust particles and other foreign Objects may damage the unit.
17. Only use the enclosed power adapter (see Technical Data).
18. Both the Product and the User's Manual are subject to change without further notice

Package Contents

Please check if the following items are located in your packaging:

			
Projector	AC Adapter	Interchangeable Plug	Use Cable
			
Remote Controller	USB Adapter	Composite AV Cable	HDMI Cable (A to C)
			
Protective case	Tripod	Micro SD Card (optional)	QSG & User Manual

FCC Compliance Statement:

This device complies with Part 15 of the FCC Rules. Operation is subjected to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television equipment reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following instructions:

- Reorient or relocate the receiving antenna.
- Move the equipment away from the receiver.
- Plug the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for additional suggestions.


Contents

Devices Overview	5
Getting Started.....	7
Charging Your Pico Projector	7
Connecting an External Input Source.....	7
Connecting Micro SD/SDHC Card	9
Connecting USB Device	9
Using Headphones	10
Functions and Operations	11
Main Menu.....	11
Photo.....	11
Audio	12
Video	12
Source.....	13
Settings.....	13
Specifications	16

Note: Any change or modifications to the equipment not expressly approved by the manufacture could void your warranty.

Devices Overview

 
Projector

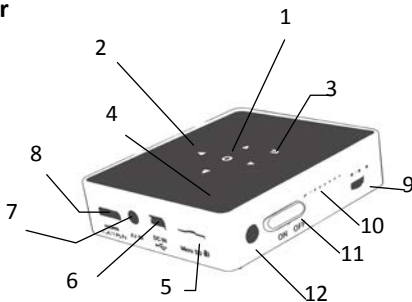

- | | |
|----------------------------|-----------------------|
| 1. OK Button | 7. Headphone/AV Jack |
| 2. Navigation Buttons | 8. HDMI Port |
| 3. Return Button | 9. Focus Wheel |
| 4. LED Indicator | 10. Speaker |
| 5. Micro SD/SDHC Card Slot | 11. Power Switch |
| 6. Mini USB/DC IN Jack | 12. Infrared Receiver |

Remote Controller

 1. Home Button
2. OK Button
3. Rewind Button
4. Return Button
5. Navigation Buttons
6. Play / Pause Button
7. Fast Forward Button
8. Volume Buttons

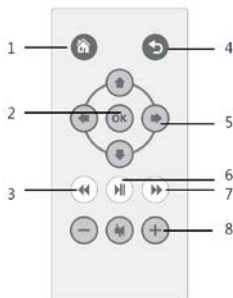

Warning:

Improper use of the battery may cause overheating, explosion or ignition, which can result in an injury or a fire. Battery leakage may damage the remote control.

Do not expose the remote control to direct sunlight.

 
Do not charge, disassemble, or deform the battery.

Do not expose the battery to fire or water.

Immediately replace an exhausted battery.

Remove the battery when you will not be using the remote for long periods of time.

Infrared Receiver



Getting Started

Charging Your Projector

The projector has a built in a Li-polymer battery for mobile use. Please fully charge the projector before its first use. The projector can also charge through USB, use the supplied usb cable to plug your projector into your computer.



 
LED Indicator

While your Projector is charging the LED on the top panel will be Red. It will turn Green when is the battery is fully charged.

Connecting an External Input Source


HDMI

1. Use the supplied HDMI cable to connect the projector to the external HDMI signal source.
2. Enter "Source" in the main menu and select "HDMI" mode.

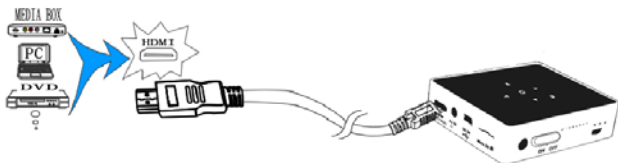

AV IN

 1. Follow the figure below to connect an external AV output device to the Headphone/AV Jack in the rear panel of the projector unit. Connection is color-coded.
2. Enter “Source” on main menu and select “AV” mode.

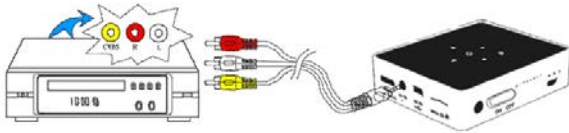

VGA (optional)

While this device can connect to a VGA Port, we do not include the cable in the supplied accessories, this cable is available for purchase wherever our Projectors are being sold and our Retail Website, Search for Lumex CBV01473.

1. Plug one end of into the **HDMI** Port on your projector.
2. Plug the other end of the cable into the VGA Port on the Pc or other external source.
3. In the main menu, select “Source” and select “VGA”.



 
Note:

1. Make sure the screen refresh frequency of your computer is 60Hz.

2. Supported screen resolution of PC:
 - 1920 x 1080 / 1600 x 1200 / 1280 x 1024
 - 1280 x 960 / 1280 x 720 / 1152 x 864
 - 1024 x 768 / 800 x 600 / 640 x 480
3. Some laptop computers do not automatically switch to projection mode when your projector is connected. Please refer to your computers to correct the settings.


Connecting Micro SD/SDHC Card

The built-in memory card reader can read micro SD/SDHC card. Gently insert the card just as shown below until you hear a click. To remove the memory card, gently push the edge of the card in and pull it out.

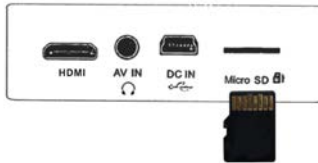

Connecting USB Device

 Connect one end of the mini USB converter cable into the mini USB jack of the unit, the other end to USB device, as shown below:

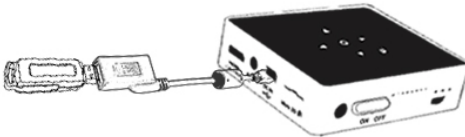

Note: When connecting a USB device to the mini USB cable, the AC adaptor can be connected to mini USB jack to simultaneously charge your projector.

Using Headphones

The projector has a built-in stereo speaker for providing you the best portable audio experience. Additionally, you can connect your headphones to the headphone jack of the unit.

Warning: Listening through headphones at a high volume for extended periods of time can result in hearing loss



Functions and Operations

Main Menu



In the main menu, press **↶** to select **USB** or **TF** (Micro SD/SDHC) mode as shown on the top-right corner of the main menu, Press **◀▶** to highlight the desired item and press **OK** to enter the submenu. Press **↶** to return to Main Menu.

Photos

Select and open images.

1. In the main menu use the **◀▶** keys to highlight **photos** press **OK** to select it, use the **▲▼◀▶** keys to select and open images.
 2. During picture playback, press **OK** to open the function key menu and use **◀▶** and **OK** to achieve their functions.
 3. During picture playback, press **↶** to exit and return to the previous menu.
- This Projector supports multiple image formats.

Audio

Select and play audio files.

1. In the main menu use the ◀▶ keys to highlight **music** pres **OK** to select it, use the ▲▼◀▶ keys to select and open Audio files use the -/+ buttons to adjust the volume.
 2. During Audio playback, press **OK** to open the function key menu and use ◀▶ and **OK** to achieve their functions.
 3. During music playback, press ▶|| to pause and press it again to resume and press ↶ to exit and return to the previous menu.
- This Projector supports multiple audio formats.

Video

Select and play video files.

1. In the main menu use the ◀▶ keys to highlight **movie** pres **OK** to select it, use the ▲▼◀▶ keys to select and open Audio files use the -/+ buttons to adjust the volume.
2. During video playback, press **OK** to open the function key menu and use ◀▶ and **OK** to achieve their functions.
3. During video playback, press ▶|| to pause and press it again to resume and press ↶ to exit and return to the previous menu.

This Projector supports multiple Video formats:

- AVI, MOV, MP4, MKV, 3GP, DAT, RM, MPG, MPEG, VOB, XVID, etc.

Source

When projecting from external source (AV, HDMI, and VGA) enter “Source” in the main menu to select the exact input source.

Note: If the screen shows “No Signal” after connecting the external AV source, please follow the instructions on “Connecting External Input Source” to select correct source. Or check whether the cable is well connected.

Default Settings



1. Image

Project Mode	Front
Smart Settings	Standard
Brightness	5
Contrast	5
Saturation	5

Press ▲▼ to select item. Then press ◀▶ to adjust the settings.

Note: The Brightness settings only work for photo and video playback.

2. Photo

View	List
Slide delay	2s
Repeat	All
Slideshow Order	By order

Press ▲▼ to select an item. Then press ◀▶ to adjust the settings.

3. Power Save

ECO Mode	Off
Auto Sleep	Off

Press ▲▼ to select an item. Then press ◀▶ to adjust the settings.

4. Language

Use ▲▼ ◀▶ keys to select a language in the language Menu.


5. System

Reset Settings
Software Update (USB)
SW Information

Use ◀▶ and OK button to achieve the desired settings.

If projecting over long periods of time


The built-in battery supports about **1.5hrs** of projection time. If you will be projecting over a long period of time, we recommend that you use the supplied AC adapter.

When the battery gets low, the low battery capacity icon  will flash. When you see this you need to plug your projector into the AC adapter and the AC adapter into a wall outlet.

If your battery gets low and you do plug it into a AC adapter, the projector will enter standby mode automatically, Plug it in and press any button to exit standby mode.

In standby mode, the LED Indicator will light up on the top panel.

Due to its high performance engine its normal for the projector to get warm with continuous work.

If the projector runs for a long time and becomes over-heated, the High-Temperature icon  will appear on the screen. The system will automatically enter the standby mode, Let cool and press any button to exit standby mode.

Specifications

Items		Descriptions
Optical Technology		VGA 0.24" DLP
Light Source		RGB LED
LED Lifetime		20,000 hours
Contrast		1000:1
Resolution		640 x 480 (VGA)
Aspect Ratio		4:3
Projection Image Size		5 " ~ 80 "
Projection Distance		20 cm ~ 200 cm
Brightness	AC Adaptor	Up to ANSI 65 Lumens
	Battery	Up to ANSI 45 Lumens
Focus		Manual
Internal Speaker		Stereo
USB		Mini USB Jack
AV source		AV in (3.5 mm input jack), Mini HDMI
Audio Output		3.5 mm Audio Output Jack
Card slot		Micro SD/SDHC Card up to 32 GB
Power Supply		Input: 100 ~ 240V AC; Output: 5V, 2A DC
Battery Type		Built-in 1250mAh, 3.7 V, Li-polymer Rechargeable Battery
Battery Lifetime		90 min (ECO mode)
Power Consumption		≤ 6W
Dimensions (L x W x H)		81 mm x 67 mm x 21 mm
Weight		100 g

For Questions or Comments Email Us at Info@ShopProjector.com

For Warranty Information & to register Your Product

Please log onto www.ShopProjector.com

© 2014 Lumex. All Rights Reserved.