

# User Guide



ZTE **SPRO 2**  
SMART PROJECTOR



## Welcome to AT&T

Thank you for purchasing the ZTE Spro™ 2 Smart Projector. To get the most from your new device, check out our videos and interactive tutorials at [att.com/Tutorials](http://att.com/Tutorials).



CES Innovation  
Award Honoree



Best Projector  
CES 2015



CES 2015  
Top Pick



The Very Best  
of CES 2015



GSMA Best Mobile Enabled  
Consumer Electronics  
Device Honoree

# Contents

<b>Getting Started</b> .....	1
Setting Up.....	1
Powering On/Off .....	4
Turning On/Off the Projector.....	5
Using Touch Control.....	6
Getting to Know Your ZTE Spro 2 Smart Projector .....	8
Key Components.....	10
Home Screen.....	11
<b>Entering Text</b> .....	15
Android™ Keyboard .....	15
Google Voice™ Typing .....	16
Changing Input Methods .....	16
Choosing Input Settings.....	16
Editing Text .....	17
<b>Projection</b> .....	18
Spro 2 Remote Control App .....	18
Projecting the Screen Content .....	18
Projecting From a microSD™ Card.....	19
Projecting an HDMI® Source or an Apple Device .....	19
Projecting With Miracast® (Wi-Fi® Display) .....	20
Using Miracast and Mobile Hotspot Simultaneously .....	21
Adjusting Projector Settings .....	22
<b>Hangouts™ (Messaging)</b> .....	23
Opening the Hangouts Screen.....	23
Sending a Message .....	23
Replying to a Message.....	24
Forwarding a Message .....	24

Changing Messaging Settings.....	24
<b>Connecting to Networks and Devices.....</b>	25
Connecting to Mobile Networks.....	25
Connecting to Wi-Fi.....	26
Using Wi-Fi Direct®.....	30
Connecting to <i>Bluetooth</i> ® Devices.....	31
Connecting to Your Computer via USB.....	34
Connecting to a USB Device.....	36
Sharing Your Mobile Data Connection.....	37
Connecting to Virtual Private Networks.....	40
<b>Browsing the Internet.....</b>	41
Opening a Web Page With Browser.....	41
Browsing Options.....	41
Using Multiple Browser Tabs.....	42
Downloading Files.....	42
Changing Browser Settings.....	42
Using Google Chrome™.....	43
<b>Entertainment.....</b>	44
Opening Your Gallery.....	44
Playing Videos.....	45
Playing Music.....	46
Recording Voice Memos.....	49
<b>Applications.....</b>	50
Calendar.....	50
Downloads.....	50
File Manager.....	50
File Share.....	51
WPS Office.....	51

<b>Google™ Applications.....</b>	52
Drive.....	52
Gmail™.....	52
Google Now™.....	54
Google+™.....	54
Maps™.....	54
Play™ Store.....	55
Voice Search.....	55
YouTube™.....	55
<b>Settings.....</b>	56
Network Settings.....	56
Device Settings.....	58
System Settings.....	60
<b>For Your Safety.....</b>	64
General Safety.....	64
Radio Frequency (RF) Energy.....	65
FCC Regulations.....	66
Distraction.....	67
Product Handling.....	67
Electrical Safety.....	70
Radio Frequency Interference.....	70
Explosive Environments.....	71
<b>Projector Light Troubleshooting.....</b>	72
<b>Specifications.....</b>	73
<b>Warranty.....</b>	74
LIMITED WARRANTY.....	75
How to Get Warranty Service.....	75
Other Warranty Programs.....	75

# Getting Started

## Setting Up

### Installing a microSD Card (not included) or micro-SIM Card


You do not need to turn off the ZTE Spro 2 to install or remove the microSD or micro-SIM card. However, before removing the microSD card when the device is on, you need to unmount it. See *Connecting to Networks and Devices – Connecting to Your Computer via USB – Removing the microSD Card From Your ZTE Spro 2 Smart Projector*.

#### NOTES:


Some applications may require a microSD card to work properly if it stores certain data on it. Therefore, it is recommended that you keep a microSD card installed and do not remove or replace it unnecessarily.

The micro-SIM card is already installed. If you need to swap micro-SIM cards, the process is similar to microSD card installation.

- ① Turn your ZTE Spro 2 upside down. Push the point of the microSD/micro-SIM pin into the hole on the microSD card slot.

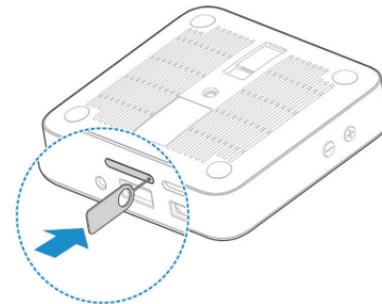

- ② Place the microSD card in the tray making sure it is properly oriented.

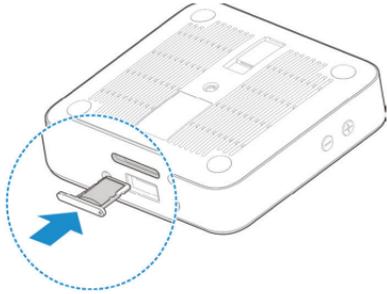

**WARNING!**

To avoid damage to the device, do not use any other kind of SIM card, or any non-standard micro-SIM card cut from a SIM card. You can get a standard micro-SIM card from your mobile service provider.

## Charging the Battery


Your ZTE Spro 2's battery has enough power to turn on. Fully charge the battery as soon as possible.

**WARNING!**

Use only ZTE-approved chargers and cables. The use of unapproved accessories could damage your device or the built-in battery.

**CAUTION:** Do not try to remove or change the built-in rechargeable battery in your device by yourself. By doing so will violate the warranty policy.

- ① Plug the AC adapter into the power socket on your ZTE Spro 2.
- ② Plug the AC adapter into an electrical outlet.

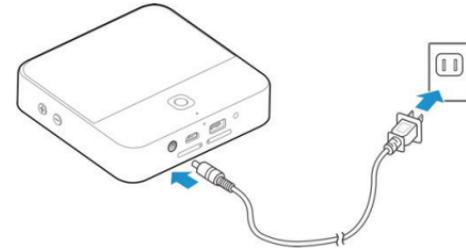

- ③ Disconnect the adapter when the battery is fully charged.

**NOTE:** If the power of the battery is extremely low, you may not be able to power on the device even when it is being charged. In this case, try again after charging it for at least 20 minutes. Contact customer service if you still cannot power on after prolonged charging.

## Powering On/Off

Ensure that the micro-SIM card is in your device and the battery is charged.

- Press and hold the **Power Button** to power on your device.
- To turn it off, press and hold the **Power Button** to open the options menu. Tap **Power off** > **OK**.

## Completing the Setup Screens

When you power on your device for the first time or after factory resetting it (see *Settings – System Settings – Backup & Reset*), the setup screens appear to help you set up certain features and preferences on your device.

- ① On the welcome screen, tap the language field to select the language you want to use and then tap **Start**.
- ② Connect to a Wi-Fi network and tap **Next**, or tap **Skip**.
- ③ If prompted, set up date, time, and time zone and then tap **Next**. Check **Automatic date & time** to synchronize date and time with the network.
- ④ Sign in to or create a Google account on your device. You can also tap **Not now**, but you must link your device to a Google account to use certain Google applications.
- ⑤ Review the options for Google services and make any changes. Then tap ►.
- ⑥ Configure the Google location options and tap **Next**.
- ⑦ Enter the owner name for the device to personalize some apps, or leave the fields blank. Then tap ►.
- ⑧ Tap **Next** to accept the terms of Google services and privacy policy.
- ⑨ Tap **Finish** to complete the setup.

## Switching to Sleep Mode

To save battery power, you can press the **Power Button** to switch your device to sleep mode. The screen will be turned off and unresponsive to tapping but other functions will still work.

Your device also goes into sleep mode by itself after a period of inactivity. You can set how long the time should be in **SETTINGS** > **Device** > **Display** > **Sleep**.

## Waking Up Your Device

- ① Press the **Power Button** to turn on the screen.
- ② Press and hold the screen to unlock it.

**NOTE:** If you have set an unlock pattern, PIN, or password for the device (see *Settings – System Settings – Security*), you'll need to draw the pattern or enter the PIN/password to unlock the screen.

## Restarting Your ZTE Spro 2 Smart Projector


If the screen freezes or takes too long to respond, try pressing and holding the **Power Button** for about 10 seconds to restart the device.

## Turning On/Off the Projector

You can use the projector embedded in your ZTE Spro 2 to project pictures onto large surfaces.

There are several ways that you can turn the projector on and off.

- Swipe up on the screen with three fingers to turn on and swipe down on the screen with three fingers to turn off.
- Swipe down on the status bar from the top of the screen and tap **Projector** below **Control Switch**.
- Press and hold the **Power Button** and tap **Turn on projector** or **Turn off projector**.
- From the **APPS** tab of the home screen, tap **Settings** > **Projector** and tap the switch next to **Projector**. You can also open the **Projector settings** screen from the **SETTINGS** tab of the home screen.

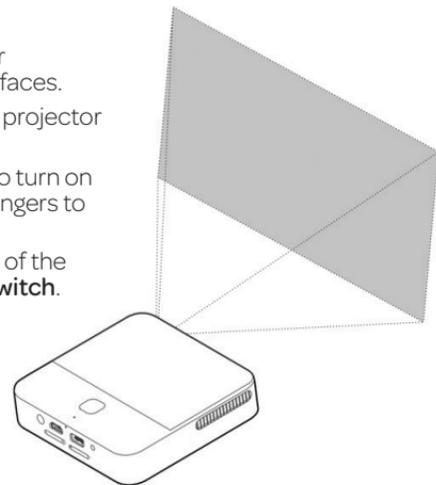

- From the **HOME** tab of the home screen, tap  on the **Projector** tile.
- If the projector floating button is enabled, tap  > **Projector off** or **Projector on**.

**NOTE:** For best results, project at a right angle onto a non-reflective white flat surface 6.6 feet to 16.4 feet from your ZTE Spro 2. See *Projection* for more information on using the ZTE Spro 2 as a projector.

### WARNING!

Do not look directly into the projection lens or point the lens toward people or animals' eyes when the projector is on, as this may cause injury to the eyes.

## Using Touch Control

Your ZTE Spro 2's touch screen enables you to control actions through a variety of touch gestures.

### Tap

When you want to type using on-screen keyboards, select items on the screen such as application and settings icons, or press the on-screen buttons, simply tap them with your finger.



### Press and Hold

To open the available options for an item (for example, a message or link in a web page), press and hold the item.



### Swipe or Slide

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.




### Drag

To drag, press and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.



### Pinch

In some apps (such as Maps, Browser, and Gallery), you can zoom in and out by placing two fingers on the screen at once and spreading them apart (to zoom in) or pinching them together (to zoom out).

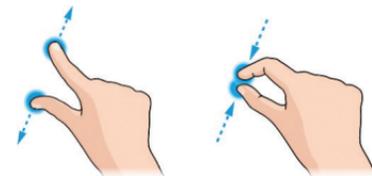

### Rotate the screen


For most screens, you can automatically change the screen orientation between landscape and portrait by holding the device upright or turning it on its side.

**NOTE:** The **Auto-rotate screen** check box needs to be selected for the screen orientation to automatically change. Tap  > **SETTINGS** > **Device** > **Display** > **Auto-rotate screen**.


You can also access the screen rotation control by swiping down on the status bar and tapping **Auto Rotate**.

## Getting to Know Your ZTE Spro 2 Smart Projector

### Top View

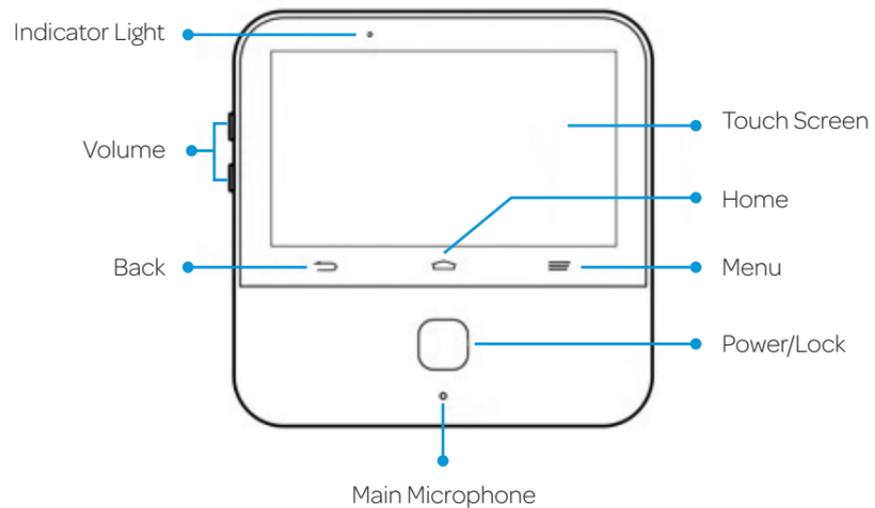


### Front View

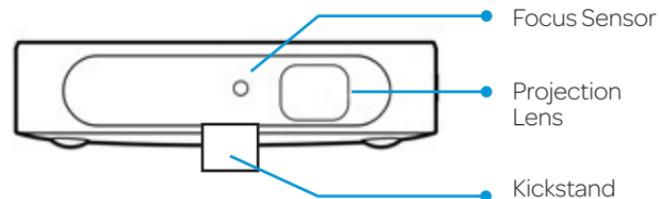

### Side View



### Back View

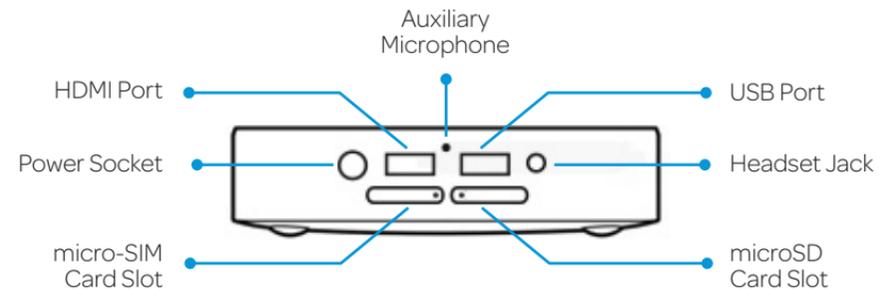

## Key Components

Component	Functions
Home Key 	<ul style="list-style-type: none"><li>• Tap to return to the HOME tab of the home screen.</li><li>• Press and hold to open the Google Now app.</li></ul>
Menu Key 	<ul style="list-style-type: none"><li>• Tap to get options for the current screen.</li><li>• Press and hold to see recently used apps.</li></ul>
Back Key 	Tap to go to the previous screen.
Projection Lens	Project images on a surface.
Focus Sensor	Analyze the clarity of the projected image in order for the projector to automatically adjust its focus.
Power/Lock	<ul style="list-style-type: none"><li>• Press and hold to enable or disable airplane mode, turn the projector or sound on/off, power on/off, or restart your ZTE Spro 2.</li><li>• Press to turn the display on or off.</li><li>• Press twice quickly when the projector is turned on to automatically adjust its focus.</li></ul>
Volume Up/Down	Press or hold to turn the volume up or down.
Main Microphone / Auxiliary Microphone	Transmit your voice. The auxiliary microphone is useful for canceling ambient noise.
Ventilation Port	Exhaust the hot air when the projector is on.

### WARNING!

- Do not look directly into the projection lens or point the lens toward people or animals' eyes when the projector is on as this may cause injury to the eyes.
- Do not place anything near the ventilation holes as this may cause internal heat buildup. Do not place your hand near the ventilation holes as this may cause injury.

## Home Screen

The home screen is the starting point for your ZTE Spro 2's applications, functions, and menus. You can customize your home screen by adding tabs, folders, and application shortcuts, or remove them as you like.



### Navigating Your Home Screen

Your home screen comes with a series of tabs. Tap a tab to access the items in it. Tap the **APPS** tab to find all your applications. Tap other tabs to find application shortcuts, folders, and widget tiles. With widget tiles, you can manage important functions of your device right from the home screen.

### Personalizing Your Home Screen

#### Add a Tab

Tap  to add a new tab to the home screen.

#### Edit a Tab

Press and hold the tab and then tap  to delete the tab and all items in it, or tap the tab name to enter a new tab name.

**NOTE:** Some tabs, such as the **APPS** tab and the **HOME** tab, are pre-configured and cannot be edited.

### Add an Application Shortcut

- 1 Press and hold an application icon in the **APPS** tab or any shortcut in any other tab.
- 2 Drag the item to the name of the tab that you want to put the item in. The screen will display the content in that tab.
- 3 Drag the item to an empty spot in the tab and release your finger.

### Remove an Application Shortcut

- 1 Press and hold an application icon in any tab other than the **APPS** tab.
- 2 Drag the icon to **Remove** at the bottom and release your finger.

### Organize Shortcuts With Folders

- 1 Press and hold an application icon in any tab other than the **APPS** tab.
- 2 Drag the icon to **+ Folder** at the bottom and release your finger. A new folder is created and the icon is moved into the folder.
- 3 To add more shortcuts into the folder, press and hold them and drag them to the folder and release them.

**NOTE:** To remove a shortcut from a folder, tap the folder to display its content, and then press and hold the shortcut and release it after dragging it out of the folder.

### Rename a Folder

- 1 Tap a folder to open it.
- 2 Tap the folder name twice.
- 3 Enter a new name and tap **Done** or tap any area outside the folder to save the name.

### Uninstall or Disable an Application

- 1 Press and hold an application icon in the **APPS** tab of the home screen.
- 2 Tap  on the app you want to uninstall or tap  on the app you want to disable.
- 3 Tap **OK**.

### Status and Notification Icons

Your ZTE Spro 2 will tell you exactly what's going on by showing you simple icons.

Indicator	What it means	Indicator	What it means
	3G connected		No signal
	4G LTE connected		Signal strength
	Airplane mode		Bluetooth on
	Battery empty		Connected to a Wi-Fi® network
	Battery partially drained		Wired headset connected
	Battery charging		New SMS/MMS/Hangouts messages
	Battery full		New Gmail message
	Silent mode		Music playing
	Updates available from Play Store		Open Wi-Fi network detected
	Unmount external USB device		Downloading data
	Upcoming event		Sending data
	microSD card removed		External USB device connected
	microSD card safely unmounted		USB tethering on
	Mobile hotspot on		

## Using the Notifications Panel

The Notifications panel provides quick access to alerts such as new messages, calendar events, and software updates.

- To open the Notifications panel, swipe down on the status bar at the top of the home screen.
- Swipe left or right to clear individual notifications or tap  at the top of the screen to clear all.
- Tap  to access the full settings menu.
- To close the Notifications panel, swipe up from the bottom of the screen or tap .
- Tap the icons below **Control Switch** to turn on or off designated features directly, or drag the brightness bar to adjust screen brightness.

## Reopening Recently Used Applications

- ① Press and hold  from any screen. The device will display recently used applications.
- ② Tap the application you want to open.

## Entering Text

You can enter text using the on-screen keyboard. Some apps open it automatically. In others, open it by tapping where you want to type. Tap  to hide the on-screen keyboard.

### Android Keyboard

The Android keyboard provides a layout similar to a desktop computer keyboard.



- Tap the alphabetic keys to enter letters. Press and hold some specific keys to enter associated accented letters or numbers. For example, to enter è, press and hold  and the available accented letters and number 3 appear. Then slide to choose è.
- Tap  to use uppercase. Double-tap  to lock uppercase. This key also changes to indicate the current case you are using:  for lowercase,  for uppercase, and  when locked in uppercase.
- Tap  to delete the text before the cursor.
- Tap  to select numbers and symbols. You can then tap  to find more.
- Tap  to use Google voice typing.
- Press and hold  to change the input languages or set up the Android keyboard.

## Google Voice Typing

Google voice typing uses the Google voice recognition service to convert speech to text.

- ① Tap  to access the voice typing feature when you are using the Android keyboard.
- ② When you see the microphone image, speak what you want to type.
- ③ You can continue entering text to keep it or to delete it.

**NOTE:** Say “comma,” “period,” “question mark,” “exclamation mark,” or “exclamation point” to enter punctuation.

## Changing Input Methods

In addition to the preinstalled keyboard and input methods, you can install other text input apps, such as Google Keyboard, and change the input method freely.

- ① When you use the on-screen keyboard to enter text, the icon  appears on the status bar.
- ② Open the Notifications panel and tap **Choose input method**.
- ③ Select the input method you want.

## Choosing Input Settings

Choose the input method settings by tapping  > **SETTINGS** > **System** > **Language & input**.

In the **KEYBOARD & INPUT METHODS** section, you can set the default input method and choose the settings for each installed input method. Tap a checkbox next to a keyboard type to enable that option.

## Editing Text

- **Move the insertion point:** Tap where you want to type. The cursor blinks in the new position, and a tab appears below it. Drag the tab to move the cursor.
- **Select text:** Press and hold or double-tap within the text. The nearest word highlights, with a tab at each end of the selection. Drag the tabs to change the selection.
- **Cut or copy:** Select the text you want to manipulate. Then tap  or , or **CUT / COPY**.
- **Replace text with the clipboard text:** Select the text you want to replace. Then tap  or **PASTE**.
- **Insert text from the clipboard:** Move cursor to the insertion point and then press and hold the tab below the cursor. Release your finger and tap **PASTE**.

# Projection

## Spro 2 Remote Control App

You can control the Spro 2 projector with your Android or iOS mobile device. To use the Spro 2 Remote Control app, you must first enable Wi-Fi (see *Connecting to Networks and Devices – Connecting to Wi-Fi*).

- 1 Tap  > **SETTINGS**.
  - 2 Scan the Android or iOS QR code shown using a QR code scanner on your mobile device.
  - 3 Follow the on-screen instructions to download the Spro 2 Remote Control app to your mobile device.
  - 4 On the projector, tap  > **SETTINGS** > **Projector**.
  - 5 Slide the **Remote Control** switch to the **ON** position.
  - 6 Open the **Spro 2 Remote Control** app on your mobile device, and then tap the **Spro** device listed in the Available devices list.
  - 7 Tap **OK** on the projector to allow the Spro 2 Remote Control app to connect.
- You can now control Spro 2 from your device's screen.

## Projecting the Screen Content

You can project whatever is displayed on the screen of your ZTE Spro 2.

**NOTE:** To project files from a USB flash drive, insert the flash drive into the USB port of your ZTE Spro 2, swipe down the status bar, and make sure that **Connect to USB stick** is enabled.

- 1 Turn on the projector.
- 2 Tap **Screen** on the **Projector** tile in the **HOME** tab of the home screen.
- 3 Place the ZTE Spro 2 on a flat surface and adjust the projection distance. Press the **Power Button** twice quickly to automatically adjust the focus. If necessary,

adjust other options in the Projector settings (see *Projection – Adjusting Projector Settings*).

- 4 Open the file you want to project with the proper app from the **APPS** tab of the home screen. For example, to open image files, tap the **APPS** tab on the home screen and tap **Gallery**. Then tap the album and the image to display it in full screen.

When you want to finish projecting, turn off the projector.


## Projecting From a microSD Card

You can project from a microSD card if you have one installed (see *Getting Started – Setting Up – Installing a microSD Card or micro-SIM Card*).

- 1 Turn on the projector.
- 2 Tap  > **APPS** > **File Manager** > **SD CARD**.
- 3 Open the file you want to project.

## Projecting an HDMI Source or an Apple Device

You can project an HDMI source when connecting your ZTE Spro 2 to a laptop or TV STB (Set Top Box). If you have an Apple device, you need to get a Lightning Digital AV Adapter (not included).

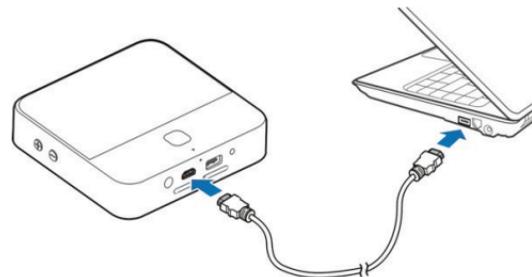


- ① Connect your ZTE Spro 2 to the laptop or TV STB via the supplied HDMI cable (laptop or TV STB not included). For Apple devices, connect the device to the HDMI cable with the Lightning Digital AV Adapter, and then connect the HDMI cable to the ZTE Spro 2.
- ② Turn on the projector.
- ③ Swipe down the status bar at the top of the screen and tap **HDMI**, or tap **HDMI** on the **Projector** tile in the **HOME** tab of the home screen.
- ④ Operate your laptop, TV box, or Apple device to select the content you want to watch.

**NOTE:** Press the **Power Button** twice quickly to automatically adjust the focus.

## Projecting With Miracast (Wi-Fi Display)

You can project media wirelessly from a Miracast-capable (Wi-Fi display capable) device to the ZTE Spro 2.

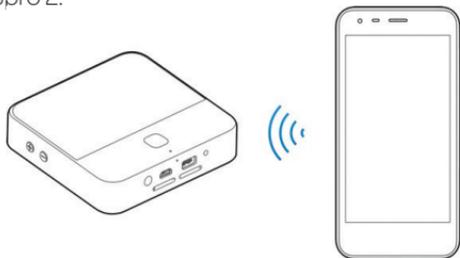

- ① Turn on the projector.
- ② Swipe down the status bar at the top of the screen and tap **Miracast**, or tap **Miracast** on the **Projector** tile in the **HOME** tab of the home screen.
- ③ Open and enable Miracast or other Wi-Fi display application on your Miracast-capable device.
- ④ When you see the name of your ZTE Spro 2 displayed in the available devices section, tap the name.

- ⑤ Tap **Accept** on your ZTE Spro 2. After successful connection, the contents in the device will be displayed on the ZTE Spro 2 screen.
- ⑥ On your device, choose the content you want to display.

**NOTE:** Press the **Power Button** twice quickly to automatically adjust the focus.

## Using Miracast and Mobile Hotspot Simultaneously

You can use the projector via a Miracast link and share your mobile data with other devices at the same time.

- ① Turn on the Mobile Hotspot function. See *Connecting to Networks and Devices – Sharing Your Mobile Data Connection – Sharing Your Mobile Data Connection as a Wi-Fi Hotspot*.
- ② Turn Miracast on.
- ③ Connect your phone or device to the ZTE Spro 2 via Miracast or Mobile Hotspot as you need.
  - To use the Internet connection shared by the ZTE Spro 2, search for hotspots and connect to the one with the name starting with "DIRECT-" using your device's Wi-Fi feature. The password is the same as the one you set for Mobile Hotspot.
  - To project content from your phone via Miracast, connect to the ZTE Spro 2 using your phone's Wi-Fi Display or Cast Screen feature.

### NOTES:

- If your device has been connected to the hotspot, it will be disconnected when you turn Miracast on. You need to search for hotspots and reconnect.
- Your device must support Wi-Fi in the 5 GHz band to use the hotspot while Miracast is on.
- While the Miracast link is active, at most 5 devices can connect to the hotspot (or 4 devices if the Miracast link is used by another device).
- With Miracast active, your hotspot cannot support some advanced features such as user management, IP filtering, and WPS.

## Adjusting Projector Settings

Tap  > APPS > Settings > Projector and you can configure the following options for the projector feature.

- **Projector:** Turn the projector on or off.
- **Projector floating button on/off:** You can use this button to turn on or off the projector, enable Auto Focus, or adjust brightness.
- **Source:** Select **Screen**, **HDMI** or **Miracast** as the projection source.
- **Brightness:** Adjust the projector brightness.  
**NOTE:** To achieve high brightness, plug in the power source to keep your ZTE Spro 2 charged.
- **Focus:** Turn on or off automatic focus or tap  and  to make manual adjustments.
- **Keystone:** Turn on or off keystone distortion or adjust it manually to correct image during a tilted projection.
- **Advanced user:**
  - **CAIC:** Enable or disable Content-Adaptive Illumination Control. The projector can automatically adjust illumination power to consume less battery while maintaining a constant image brightness.
  - **LABB Settings:** Enable, disable, or adjust the level of Local Area Brightness Boost. The projector can adaptively brighten up areas of an image that are dim to improve overall image quantity.
- **Color correction:** Adjust the color of the projection.
- **Remote Control:** Turn on to enable the remote control feature.
- **Anti-shake:** Turn the anti-shake feature on or off.  
**NOTE:** You can also turn this feature on or off from the Control Switch in the Notifications panel.
- **G-sensor sensitivity:** Adjust the sensitivity of the accelerometer. It helps the device detect movement so that it can automatically adjust during automatic focus, anti-shake, and keystone correction.
- **Auto projector on/off:** You can enable the device to turn the projector feature on or off automatically at a set time.

## Hangouts (Messaging)

You can use **Hangouts** to send, receive, and manage text messages (SMS) and multimedia messages (MMS).

### Opening the Hangouts Screen

Tap  > APPS > Hangouts.

The **Hangouts** screen opens where you can create a new message or open an ongoing message thread.

- Tap  to write a new text or multimedia message.
- Tap an existing message thread to open the conversation you've had with a certain number.

### Sending a Message

- ① On the Hangouts screen, tap  > **New SMS**.
- ② Enter a contact name or phone number, and then tap the suggestion to add it as the recipient.  
If you have added a Google account on your ZTE Spro 2, your ZTE Spro 2 will find the matching contact from your account.
- ③ Tap .
- ④ Enter your message in the text field at the bottom, and then tap **Send**.

#### NOTES:

- To insert an attachment after typing a message, tap  > , choose the attachment, and then tap .
- Do not add an email address as a recipient or add any attachment if you want to send a text message. Otherwise you may be charged for a multimedia message.

## Replying to a Message

Messages you receive are appended to existing threads for the same number. If the new message comes from a new number, a new thread is created.

- ① On the **Hangouts** screen, tap the thread that has the message you want to reply to.
- ② Type your reply in the text box at the bottom. You can tap  >  if you want to reply with an MMS.
- ③ Tap **Send** or , for SMS or MMS, respectively.

## Forwarding a Message

- ① On the **Hangouts** screen, tap the thread that has the message you want to forward.
- ② Tap and hold the message.
- ③ Tap **Forward** in the menu that opens.
- ④ Select a recipient number in the menu that opens. (You can also tap **New SMS**, select or enter a recipient, and then tap  > .)
- ⑤ Edit the content if you want.
- ⑥ Tap .

## Changing Messaging Settings

Tap  > **Settings** > **SMS** in the **Hangouts** screen to change messaging settings.

## Connecting to Networks and Devices

### Connecting to Mobile Networks

#### Controlling Mobile Data Use

*To enable or disable data access:*

- ① Tap  > **SETTINGS** > **Network** > **Mobile networks** > **Mobile Data**.
- ② Check **Standard Data** to enable data access over the mobile network. Clear the check box to disable data access.

*To get data services when roaming internationally:*

- ① Tap  > **SETTINGS** > **Network** > **Mobile networks** > **International Data Roaming**.
- ② Check **International Data**.

**NOTE:** Data roaming may incur significant roaming charges.

*To enable always-on data access:*

- ① Tap  > **SETTINGS** > **Network** > **Mobile networks**.
- ② Check **Always-on mobile data** > **OK** to allow applications to update data automatically.

**NOTE:** When you enable this option, more data traffic will be generated for automatic updates of applications data, and your device will consume more power.

#### Set Access Point Names

To connect to the Internet with your mobile network, you can use the default Access Point Names (APN). And if you want to add a new APN, please contact the service provider to get the necessary information.

- ① Tap  > **SETTINGS** > **Network** > **Mobile networks** > **Access Point Names**.
- ② Tap .
- ③ Tap each item to enter the information you get from your service provider.

- 4 Tap  > **Save** to complete.

**NOTE:** To set the APN to default settings, tap  > **Reset to default** > **Continue**.

## Connecting to Wi-Fi

Wi-Fi is a wireless networking technology that can provide wireless Internet access over distances of up to 300 feet (90 meters).

### Connecting to a Wi-Fi Network

- 1 Tap  > **SETTINGS** > **Network** > **Wi-Fi**.
- 2 Slide the **Wi-Fi** switch to the **ON** position to turn on Wi-Fi.
- 3 Tap a network name to connect to it.
- 4 If the network is secured, enter the password and tap **Connect**.

#### NOTES:

- Your ZTE Spro 2 automatically connects to previously used Wi-Fi networks when they are in range.
- To connect to a Wi-Fi router that supports WPS, tap  on your ZTE Spro 2's Wi-Fi menu and press the WPS button on your router.

### Getting Notified of Open Networks

When Wi-Fi is on, your ZTE Spro 2 can notify you of detected open Wi-Fi networks by showing  in the status bar. Here's how to turn this feature on or off.

- 1 Tap  > **SETTINGS** > **Network** > **Wi-Fi**.
- 2 Slide the **Wi-Fi** switch to the **ON** position.
- 3 Tap  > **Advanced**.
- 4 Check or uncheck **Network notification**.

### Adding a Wi-Fi Network

You can add a Wi-Fi network if the network does not broadcast its name (SSID), or to add a Wi-Fi network when you are out of range.

To connect to a secured network, you first need to get the security details from the network's administrator.

- 1 Tap  > **SETTINGS** > **Network** > **Wi-Fi**.
- 2 Slide the **Wi-Fi** switch to the **ON** position.
- 3 Tap **ADD NETWORK**.
- 4 Enter the network SSID (name). If necessary, enter security or other network configuration details.
- 5 Tap **Save**.

### Deleting a Wi-Fi Network

You can delete a Wi-Fi network that your ZTE Spro 2 is connected to – for example, if you don't want your ZTE Spro 2 to connect to it automatically or if it is a network that you no longer use.

- 1 Tap  > **SETTINGS** > **Network** > **Wi-Fi**.
- 2 Slide the **Wi-Fi** switch to the **ON** position.
- 3 Tap the Wi-Fi network name and then tap **Forget**.

### Connecting to a WPS Network

Wi-Fi Protected Setup (WPS) makes it easy to connect your ZTE Spro 2 to access points that support WPS.

You can use one of the following methods to connect to a wireless network using WPS.

### **Method one: WPS button (Recommended)**

- ① Tap  > **SETTINGS** > **Network** > **Wi-Fi**.
- ② Slide the **Wi-Fi** switch to the **ON** position.
- ③ Tap .
- ④ Press the WPS button on the wireless router and the access point will recognize your ZTE Spro 2 and add it to the network.

### **Method two: PIN of ZTE Spro 2 Smart Projector**

- ① Tap  > **SETTINGS** > **Network** > **Wi-Fi**.
- ② Slide the **Wi-Fi** switch to the **ON** position.
- ③ Tap  > **WPS Pin Entry**.
- ④ The WPS PIN displays on the screen. Enter the PIN into the access point's setup page.

After entering the PIN, your ZTE Spro 2 automatically finds the access point and configures the connection.

### **Method three: PIN of the access point**

- ① Tap  > **SETTINGS** > **Network** > **Wi-Fi**.
- ② Slide the **Wi-Fi** switch to the **ON** position.
- ③ Tap a WPS-capable access point. It has a  icon next to its name.
- ④ In the window that opens, check **Show advanced options**.
- ⑤ Tap the field below **WPS PIN from access point** and select **Enable**.
- ⑥ Enter the PIN of the access point and tap **Connect**. You can find the PIN on the configuration page of the access point.

**NOTE:** For detailed information about the WPS feature of the access point, please refer to its user documents.

## **Adjusting Advanced Wi-Fi Settings**

- ① Tap  > **SETTINGS** > **Network** > **Wi-Fi**.
- ② Tap  > **Advanced** to adjust the following settings.
  - **Network notification:** Get notifications in the status bar when Wi-Fi is on and an open network is available.
  - **Keep Wi-Fi on during sleep:** Set whether to keep Wi-Fi on in sleep mode.
  - **Scanning always available:** Allow Google's location service and other apps to scan for networks, even when Wi-Fi is turned off.
  - **Avoid AP without Internet:** Only use Wi-Fi networks that have Internet connection.
  - **Connect to AT&T Wi-Fi spot:** Automatically connect to AT&T Wi-Fi hotspots when they are available.
  - **Wi-Fi band:** Select the Wi-Fi frequency band according to the available Wi-Fi networks.
  - **Install certificates:** Install certificates from the internal storage or the external microSD card. Some Wi-Fi networks need to find the correct certificates to grant you access.
  - **Wi-Fi optimization:** Minimize battery usage when Wi-Fi is on.
  - **MAC address:** Check the MAC address.
  - **IP address:** Check the IP address.

## Using Wi-Fi Direct

Wi-Fi Direct allows Wi-Fi devices to connect to each other without the need for wireless access points (hotspots).

**NOTE:** Wi-Fi Direct is not completely compatible among different device manufacturers. You may need to install third-party applications to share files between different devices from different manufacturers.

### Connecting to Another Device via Wi-Fi Direct

- 1 Tap  > **SETTINGS** > **Network** > **Wi-Fi**.
- 2 If Wi-Fi is off, slide the **Wi-Fi** switch to the **ON** position.
- 3 Tap  > **Wi-Fi Direct**. Your ZTE Spro 2 will search for other devices enabled with Wi-Fi Direct connections.
- 4 Tap a device name below **PEER DEVICES** to connect with it.
- 5 Tap **Connect**.

The other device will receive a connection prompt and need to accept the request for connection. Both devices may need to enter a common PIN.

Once connected the device is displayed as “Connected” in the PEER DEVICES list.

### Sending Data via Wi-Fi Direct

- 1 Open the appropriate application and select the file or item you want to share.
- 2 Select the option for sharing via Wi-Fi Direct. The method may vary by application and data type.
- 3 Tap a device your ZTE Spro 2 has connected with or wait for it to search for new devices and tap one of them.

### Receiving Data via Wi-Fi Direct

When an attempt to transfer data via Wi-Fi Direct is received, you can see a notification in the status bar. Open the Notifications panel, tap the notification and select **Accept** to start receiving the data.

Received files are stored automatically in a dedicated folder (*WiFiShare*, for instance). You can access them with the **File Manager** app.

## Connecting to Bluetooth Devices

*Bluetooth* is a short-range wireless communication technology. Phones or other devices with *Bluetooth* capabilities can exchange information wirelessly within a distance of about 32 feet (10 meters).

### Turning Bluetooth On/Off

- 1 Tap  > **SETTINGS** > **Network** > **Bluetooth**.
  - 2 Slide the **Bluetooth** switch to the **ON** or **OFF** position.
- When *Bluetooth* is on, the  icon will appear in the status bar.

### Making Your ZTE Spro 2 Smart Projector Visible

In order to work with other phones or devices that have *Bluetooth*, you need to make your ZTE Spro 2 ‘visible’ to them.

- 1 Tap  > **SETTINGS** > **Network** > **Bluetooth**.
- 2 Slide the **Bluetooth** switch to the **ON** position if *Bluetooth* is off.
- 3 Tap your device name at the top of the screen to make your ZTE Spro 2 visible or invisible.

**NOTE:** Tap  > **Visibility timeout** to set the *Bluetooth* visibility timeout of your ZTE Spro 2.

## Changing the Device Name

- 1 Tap  > **SETTINGS** > **Network** > **Bluetooth**.
- 2 Slide the **Bluetooth** switch to the **ON** position if *Bluetooth* is off.
- 3 Tap  > **Rename device**.
- 4 Edit the name and tap **Rename**.

## Pairing With Another *Bluetooth* Device

- 1 Tap  > **SETTINGS** > **Network** > **Bluetooth**.
- 2 Slide the **Bluetooth** switch to the **ON** position if *Bluetooth* is off.  
Your ZTE Spro 2 automatically scans for and displays the IDs of all available *Bluetooth* devices in range. You could tap **SEARCH FOR DEVICES** on the top right of the screen if you want to scan again.
- 3 Tap the device you want to pair with.
- 4 Confirm that the *Bluetooth* passkeys are the same between the two devices and tap **Pair**. Alternately, enter a *Bluetooth* passkey and tap **Pair**.

Pairing is successfully completed when the other device accepts the connection or the same passkey is entered.

**NOTE:** The *Bluetooth* passkey may be fixed for certain devices, such as headsets and hands-free car kits. You can try entering 0000 or 1234 (the most common passkeys), or refer to the documents for that device.

## Unpairing From a *Bluetooth* Device

You can make your ZTE Spro 2 forget its pairing connection with another *Bluetooth* device. To connect to the device again, you may need to enter or confirm a passkey again.

- 1 Tap  > **SETTINGS** > **Network** > **Bluetooth** and ensure that *Bluetooth* is turned on.

- 2 In the list of paired devices, tap  beside the *Bluetooth* device you want to unpair from.
- 3 Tap **Unpair**.

## Sending Data via *Bluetooth*

- 1 Open the appropriate application and select the file or item you want to share.
- 2 Select the option for sharing via *Bluetooth*. The method may vary by application and data type.
- 3 Tap a *Bluetooth* device your ZTE Spro 2 has paired with or wait for it to search for new devices and tap one of them.

## Receiving Data via *Bluetooth*

- 1 Turn *Bluetooth* on before trying to receive data via *Bluetooth*.  
**NOTE:** If your ZTE Spro 2 has not been paired with the sending device, you may need to keep the ZTE Spro 2 visible through *Bluetooth*.
- 2 Swipe down on the status bar and tap .
- 3 Tap **Accept** to start receiving the data.


Depending on whether a microSD card is installed, received files are stored automatically in a dedicated folder (*Bluetooth*, for instance) in the internal storage or microSD card. You can access them with the **File Manager** app.

## Connecting to Your Computer via USB

You can connect your ZTE Spro 2 to a computer with a USB cable (not included) and transfer music, pictures, and other files in both directions. Your ZTE Spro 2 stores these files in the internal storage or on an external microSD card. For more information, see *Settings – Device Settings – Storage*.

### Connecting Your ZTE Spro 2 Smart Projector to a Computer via USB

- 1 Insert the end of the cable into the USB port of the ZTE Spro 2 and insert the other end of the cable into an available USB port on your computer.

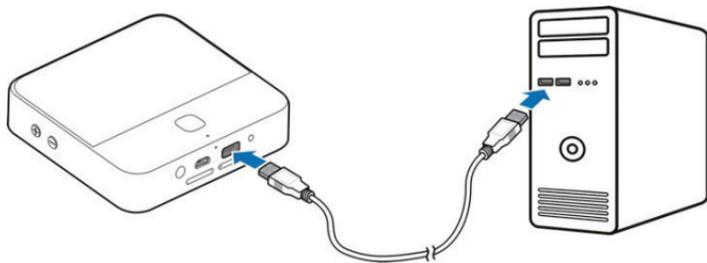

- 2 Swipe down on the status bar to open the Notifications panel and tap **Connect to PC** to highlight it.
- 3 Open the Notifications panel and tap  **Connected as ...** or tap  > **SETTINGS** > **Device** > **USB mode** > **Connect to PC**.
- 4 Choose one of the following options:
  - **Install driver:** Install the driver needed for connecting the ZTE Spro 2 to your PC.  
**NOTE:** You can also install the driver on PC by double-clicking the new CD-ROM drive.

- **Media device (MTP):** Transfer media files on Windows® PC or Mac®.

**NOTE:** For Windows XP, please install the drivers and Media® Player 11 (or later version) when you use Media device (MTP) for the first time.

- 5 When you are done, disconnect your ZTE Spro 2 from the computer and tap **Connect to PC** in the Notifications panel to disable it.

### Connecting With Windows Media Player

You can sync media files on your ZTE Spro 2 and the computer installed with Windows Media Player.

- 1 Connect the ZTE Spro 2 to your computer via USB and choose **Media device (MTP)**.
- 2 Open Windows Media Player and synchronize media files.

### Disconnecting Your ZTE Spro 2 Smart Projector From the Computer

To disconnect the ZTE Spro 2 from the computer, simply unplug the USB cable when you're finished.

### Removing the microSD Card From Your ZTE Spro 2 Smart Projector

If you need to remove the microSD card while ZTE Spro 2 is on, you must unmount it first.

- 1 Open the Notifications panel and ensure that **Connect to PC** is not highlighted.
- 2 Tap  > **SETTINGS** > **Device** > **Storage**.
- 3 Scroll down and tap **Unmount SD card** > **OK**.
- 4 When  appears in the status bar, you can safely remove the microSD card from the ZTE Spro 2.

**NOTE:** If you unmount the microSD card, some apps that you are using will stop and may be unavailable until you remount the microSD card.


## Erasing the microSD Card

- 1 Tap  > **SETTINGS** > **Device** > **Storage**.
- 2 Scroll down and tap **Erase external SD card** > **Erase SD card** > **Erase everything**.

**CAUTION:** The formatting procedure erases all data on the microSD card, after which the files CANNOT be retrieved.

## Connecting to a USB Device

You can connect a USB device such as a USB flash drive to the ZTE Spro 2 via the USB port, and tap  > **APPS** > **File Manager** > **USB DEVICE** to view the files saved in the USB device.

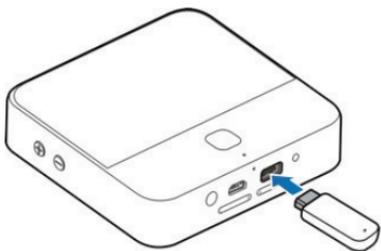

### NOTES:

- Before connecting your ZTE Spro 2 with a USB device, swipe down on the status bar to open the Notifications panel and ensure that **Connect to USB stick** is highlighted.
- To disconnect a USB device from your ZTE Spro 2, you should open the Notifications panel and tap . After the ZTE Spro 2 indicates that the external storage device has been unmounted, you can remove the USB device.

**CAUTION:** Before unmounting the USB device, you should not enable **Connect to PC**, otherwise the connection between the ZTE Spro 2 and the USB device will be broken, and you may damage or lose data.

## Sharing Your Mobile Data Connection

You can share your ZTE Spro 2's data capabilities through tethering or by activating the mobile hotspot feature to create a mobile Wi-Fi hotspot.

### Sharing Your Mobile Data Connection via USB

You can access the Internet on your computer via the USB tethering feature of your device. The feature needs data connection on a mobile network and may result in data charges.

**NOTE:** If your device has a microSD card, you can't mount it on your computer while USB tethered.

- 1 Connect your device to your computer with a USB cable.
- 2 Tap  > **SETTINGS** > **Network** > **More...**
- 3 Check **USB tethering**. A new network connection will be created on your computer.

To stop sharing your data connection, uncheck **USB tethering** or disconnect the USB cable.

**NOTE:** You may need to contact your service provider to enable tethering on your device.

### Sharing Your Mobile Data Connection via Bluetooth

If your computer can obtain an Internet connection via *Bluetooth*, you can configure your device to share its mobile data connection with your computer.

- 1 Pair your device with your computer via *Bluetooth*.
- 2 Configure your computer to obtain its network connection via *Bluetooth*. For more information, please see your computer's documentation.
- 3 Tap  > **SETTINGS** > **Network** > **More...**
- 4 Check **Bluetooth tethering**. Your computer is now sharing your device's data connection.

**NOTE:** To stop sharing your data connection, uncheck **Bluetooth tethering**.

## Sharing Your Mobile Data Connection as a Wi-Fi Hotspot

You can share your device's data connection with other devices by turning your ZTE Spro 2 into a mobile Wi-Fi hotspot. The feature needs data connection on a mobile network and may result in data charges.

**NOTE:** When the mobile Wi-Fi hotspot feature is enabled, you cannot access the Internet via Wi-Fi connection with the ZTE Spro 2. You can still remain connected to the Internet via mobile data network.

- 1 Tap  > **SETTINGS** > **Network** > **Mobile Hotspot**.
  - 2 Tap **Wi-Fi Hotspot** to turn on the mobile hotspot. If prompted, tap **OK** to disconnect Wi-Fi.
  - 3 On another device, locate your ZTE Spro 2 via Wi-Fi and connect with it.
- To stop sharing your data connection, turn off Mobile Hotspot.

## Renaming or Securing Your Wi-Fi Hotspot

You can change the name of your ZTE Spro 2's mobile hotspot (SSID) and secure it with a password.

- 1 Tap  > **SETTINGS** > **Network** > **Mobile Hotspot**.
- 2 Tap **Settings**. Set your name and security options as follows:
  - **Network Name:** Enter or edit a network SSID (name) that other devices see when scanning for Wi-Fi networks.
  - **Password:** Set the password if a security option is selected.
  - **Show password:** Check this option to display the password in the Password field.
  - **Wi-Fi band:** Set the band that the mobile hotspot should be available on.
  - **Channel:** To avoid interference with other Wi-Fi networks, try using a different channel.

- **Security:** Choose a security option: **None** (not recommended) or **WPA2 PSK** (other users can access your mobile hotspot only if they enter the correct password). When you select **WPA2 PSK**, tap the **Password** field to edit the security password.
- **Broadcast network name (SSID):** Check this option to broadcast your network SSID. If the broadcast is disabled, other users need to get your network SSID to find the Wi-Fi hotspot.

- 3 Tap **Save** to save your settings.

## Blocking Mobile Hotspot Access

To prevent a device from connecting to the mobile hotspot, add it to the hotspot's blocked list.

- 1 Tap the **Hotspot** tile in the **HOME** tab of the home screen.
- 2 Tap **Manage users**.
- 3 Select the device you want to block (scroll down to see more connected devices).
- 4 Tap **Block** > **OK**.

## Connecting to Virtual Private Networks

Virtual private networks (VPNs) allow you to connect to the resources inside a secured local network. VPNs are commonly used by corporations, schools, and other institutions to let people access local network resources when not on campus, or when connected to a wireless network.

Depending on the type of VPN you are using, you may be required to enter your login credentials or install security certificates before you can connect to your VPN. You can get this information from your network administrator.

### Adding a VPN

- 1 Tap  > **SETTINGS** > **Network** > **More...** > **VPN**.
- 2 Tap  and fill in the information provided by your network administrator.
- 3 Tap **Save**.

The VPN is added to the list on the VPN screen.

**NOTE:** You must set a lock screen pattern, PIN, or password before using VPN.

### Connecting to a VPN

- 1 Tap  > **SETTINGS** > **Network** > **More...** > **VPN**.
- 2 Tap the VPN that you want to connect to.
- 3 When prompted, enter any requested credentials, and then tap **Connect**.

### Modifying a VPN

- 1 Tap  > **SETTINGS** > **Network** > **More...** > **VPN**.
- 2 Press and hold the VPN that you want to modify.
- 3 Tap **Edit profile** and edit the VPN settings you want.
- 4 Tap **Save**.

## Browsing the Internet

Your ZTE Spro 2 has two options for Internet access. Use Browser or Google Chrome to view web pages and search for information.

### Opening a Web Page With Browser

- 1 Tap  > **APPS** > **Browser** to launch Browser.
- 2 Tap the address box at the top of the web page. If the address box isn't visible, scroll to the top of the page to show it.
- 3 Enter the address (URL) of a web page. Or, enter terms you want to search for.
- 4 Tap a URL or search suggestion, or tap **Go** on the keyboard to open the web page or search results.

**NOTE:** Tap  beside the address box if you want to stop opening the page.

### Browsing Options

While viewing most web pages, you can do the following:

- **Scroll:** Swipe the screen in any direction.
- **Zoom out:** Pinch two fingers together.
- **Zoom in:** Spread two fingers apart.
- **Go back:** Tap  > .
- **Go forward:** Tap  > .
- **Refresh the page:** Tap  beside the address box or tap  > .
- **Send the page URL to friends:** Tap  > **Share page** and select how you want to send the URL.
- **Follow a link:** Tap a link on the web page to open it.
- **Add the page to Bookmarks:** Tap  in front of the address box and select **Add bookmark**. Edit the name, address and folder, and then tap **Add**.

## Using Multiple Browser Tabs

You can open several web pages at the same time (one page in each tab) and switch between them freely.

### To open a new browser tab:

Tap  at the top right of the browser screen and then a new browser window opens.

### To switch between tabs:

- ① Slide left or right on the top of the browser screen to view all opened browser tabs.
- ② Tap the tab you want to view.

**NOTE:** Tap  on a tab to close it. Press and hold a tab to get more options.

## Downloading Files

- ① Press and hold an image or a link in a web page.
- ② In the menu that opens, tap **Save image** or **Save link**.

The downloaded files are saved to the internal storage or the microSD card.

## Changing Browser Settings

You can configure a number of browser settings to customize the way you browse the web, including several that you can use to control your privacy.

To open the browser settings screen, tap  > **Settings** in the web page screen.

## Using Google Chrome

You can use Google Chrome to browse the Internet. Chrome on your ZTE Spro 2 can sync bookmarks, browsing history, and opened tabs from your Google account.

- ① Tap  > **APPS** > **Chrome**.
- ② Read the terms of service and tap **ACCEPT & CONTINUE**.
- ③ Your tabs, bookmarks, and more will be synced to your Google account. To change sync settings, tap **SETTINGS**. Otherwise tap **DONE**.
- ④ Tap the web address bar. Enter a URL or search word and tap **Go** to open the web page or search results.
- ⑤ Scroll to navigate and tap links to open them. Use the pinch gesture to zoom out and the spread gesture to zoom in. Tap  for additional options.

**NOTE:** To open a new web page in a new tab, tap  > . The number in the icon indicates the number of tabs you have opened.

# Entertainment

## Opening Your Gallery

Gallery helps you view pictures and play videos. You can also do some basic editing of the pictures, set one as wallpaper, or share pictures or videos in different ways.

- 1 Tap  > **APPS** > **Gallery**. Your albums are displayed.
- 2 Tap an album to see the pictures and videos in it.
- 3 Tap a picture or a video screenshot to show it in full screen.




When viewing a picture or a video screenshot in full screen, the following features are available:

- Swipe horizontally to see other pictures or videos in the same album. You can also tap **Slideshow** at the top right to browse the album contents in a slideshow.

- Pinch a picture or video screenshot to make it smaller. You'll then see a filmstrip-style view of all pictures and videos in the album. Swipe left or right to scan through them all. Swipe one item up or down to delete it.
- Double-tap the picture or video screenshot, or pinch two fingers together or spread them apart to zoom out or in.
- For a picture, tap  to rotate, delete, share, print, or rename it, check file details, set it as the lock screen wallpaper, or change slideshow setting.
- For a video screenshot, tap  to delete, share, or rename the video file, check file details, or change slideshow settings.
- To play the video, tap  at the center and select a player to start playing.

## Playing Videos

Tap  > **APPS** > **Video Player**. This will open your video library and show the video files on your device (including the microSD card and the USB device if they are available). Tap a video file to start playing.

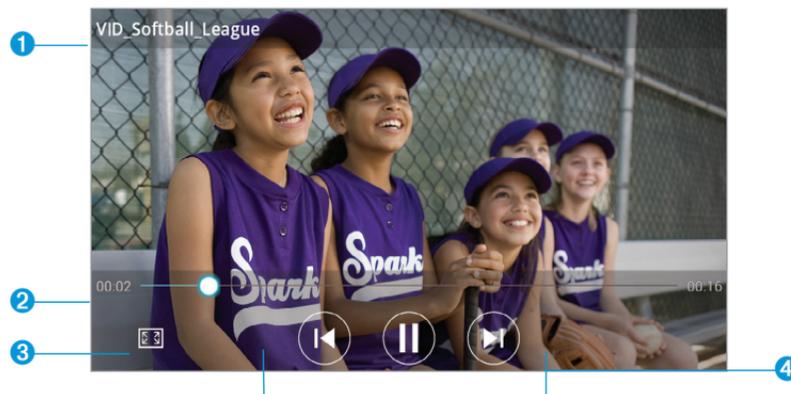

Number	Function
1	Video name.
2	Drag the progress bar to jump to any part of the video. You can also slide horizontally on the video to rewind or fast forward.
3	Crop or fit the video to the screen.
4	Pause or resume, skip to the previous or the next video.

**NOTE:** Slide vertically on the right or left part of the screen to adjust brightness or volume, respectively.

## Playing Music

You can play audio files with the **Play Music** app.

### Adding Music to Your Device


Before using Play Music, you need to copy or download audio files to your device. To do this, you can:

- Copy music files from a computer: Connect your ZTE Spro 2 and the computer with a USB cable. Switch the connection mode to Media device (MTP) and copy the files to ZTE Spro 2's internal storage or external microSD card. See *Connecting to Networks and Devices – Connecting to Your Computer via USB – Connecting Your ZTE Spro 2 Smart Projector to a Computer via USB*.
- Download music files from web pages. See *Browsing the Internet – Downloading Files*.
- Receive files via *Bluetooth* or *Wi-Fi Direct*. See *Connecting to Networks and Devices – Connecting to Bluetooth Devices – Receiving Data via Bluetooth* and *Using Wi-Fi Direct – Receiving Data via Wi-Fi Direct*.

### Playing Your Music

- ① Tap  > **APPS** > **Play Music**. If you are prompted, select an account to access its online music library or tap **Skip** to view the local library.
- ② Tap  > **My Library** to view all the music organized by playlists, stations, genres, artists, albums, and songs.
- ③ Tap a song to start playing it.
- ④ Adjust the volume with the **Volume Buttons**.

While a song is playing, tap the summary information at the bottom to display the playback screen.

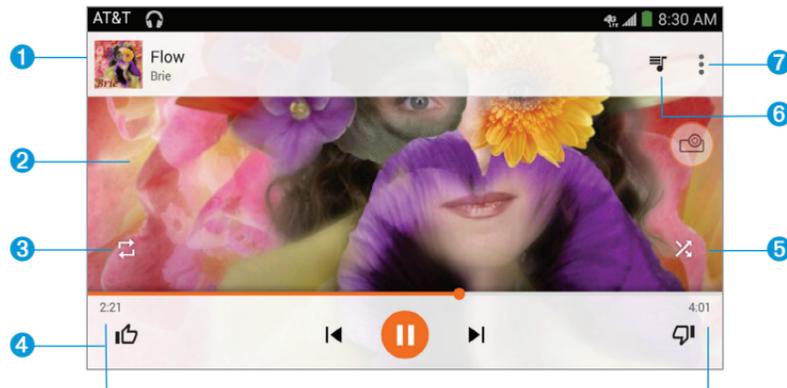

Number	Function
1	Song and artist information.
2	Album artwork.
3	Toggle repeat mode.
4	Playback control: skip songs, pause and resume playback. Drag the progress bar to jump to any part of the song. Give the song a thumbs-up or thumbs-down.
5	Toggle shuffle mode.
6	Tap to see the current playlist (queue).
7	More options.

## Managing Playlists

Create playlists to organize your music files into sets of songs, so that you can play the songs you like in the order you prefer.

### *To create a playlist or add a song to a playlist:*

- 1 Tap  next to a song and select **Add to playlist**.
- 2 Tap an already-created playlist or tap **New playlist** and follow the screen prompts to create a new playlist.

### *To remove a song from a playlist:*

- 1 Tap  > **My Library** > **PLAYLISTS** in the **Play Music** app and open a playlist.
- 2 Tap  next to a song in the playlist.
- 3 Tap **Remove from playlist**.

### *To delete a playlist:*

- 1 Tap  > **My Library** > **Playlists** in the **Play Music** app.
- 2 Tap  below the playlist you want to delete.
- 3 Tap **Delete** > **OK**.

**NOTE:** Certain automatically created playlists such as Last added cannot be deleted.

## Recording Voice Memos

The Sound Recorder app enables you to record your voice memos.

- 1 Tap  > **APPS** > **Sound Recorder**.
- 2 Tap  to start recording. During recording, you can do the following:
  - Tap  /  to pause or continue the recording.
  - Tap  > **Delete** to cancel the recording.
- 3 Tap  to stop recording. The memo is automatically saved. You can tap  to play it immediately, or tap  to share or  to delete the recording.

**NOTE:** Tap **My records** at the top right of the screen to see all your voice memos.

# Applications

## Calendar

Tap  > **APPS** > **Calendar**. The Calendar app works with Google Calendar™ service for creating and managing events, meetings, and appointments. You need to sign in to your Google accounts to use Calendar on your ZTE Spro 2.

To access Calendar settings, tap  > **Settings**. You can change **General settings**, which apply to all accounts, or other settings that only apply to specific accounts.

## Downloads

The Downloads app keeps a record of the files you have downloaded using apps such as **Browser** or **Chrome**.

Tap  > **APPS** > **Downloads** to check the record.

- Tap a file to open it with the appropriate application.
- Press and hold a file to select it for sharing or deletion.

## File Manager

Quickly access all of your images, videos, audio clips, and other types of files on your internal storage and the microSD card.

Tap  > **APPS** > **File Manager**. You can find the file you need by category in the **CATEGORY** tab, or tap **DEVICE**, **SD CARD**, or **USB DEVICE** to browse folders and files on the internal storage, the microSD card, or a connected USB device.

- Tap folders and files to access stored items.
- Press and hold an item to access option icons such as Copy, Move, Share, and Delete.

- To copy or move an item, tap  or , then navigate to a new location and tap **PASTE**.
- Tap  to create a new folder in the current directory.

## File Share

You can share files on the ZTE Spro 2 with other Wi-Fi capable devices using the File Share feature. To use File Share:

- ① Copy or move the files you want to share to the FileShare folder on the internal storage. You can do this on the ZTE Spro 2 with the **File Manager** app or on your PC while the ZTE Spro 2 is connected to it.
- ② Turn on the Mobile Hotspot feature and connect another device to your ZTE Spro 2.
- ③ Tap  > **SETTINGS** > **Network** > **File Share**. If File Share is off, turn it on. You can find the URL and password in Settings.
- ④ On the other device, open the URL with the web browser to open the web page.
- ⑤ Enter the password to access the shared files or upload files to your ZTE Spro 2.

**NOTE:** Tap **Refresh** in the File Share settings screen to update the password. All connected devices need to re-enter the new password once it is refreshed.

## WPS Office

Tap  > **APPS** > **WPS Office**. You can use the app to open or create spreadsheets, presentations, and text files, and read PDF files on your ZTE Spro 2.

## Google Applications

Signing in to your Google account allows you to synchronize Gmail and Calendar between your device and the Google server. You also need a Google account to use Drive, Google+, Play Store and some other applications.

You can easily sign in to your existing Google account or create one.

- 1 Tap  > **SETTINGS** > **Device** > **Add account** > **Google**.
- 2 If you have a Google account, tap **Existing**. Enter your email and password and then tap . If you don't have an account, tap **New**.
- 3 Follow the prompts to set up your account. When the account is successfully added, it is displayed in the **ACCOUNTS** section in the **SETTINGS** > **Device** menu.

### Drive

Tap  > **APPS** > **Drive**. The Drive app allows you to store files on Google servers for free after you sign in to your Google account. You can access them on your computers, phones, and other devices, share them, or collaborate with others.

### Gmail

Tap  > **APPS** > **Gmail**. Gmail is a web-based email service that's configured when you sign in to your Google account. Depending on your synchronization settings, the Gmail on your ZTE Spro 2 can be automatically synchronized with your Google account on the web.

## Writing and Sending a Message

- 1 Open your Gmail inbox.
- 2 Tap .
- 3 Enter an email address in the 'To' field. Tap the space key before entering each additional recipient.  
**NOTE:** You can also enter a contact name and your ZTE Spro 2 will find the matching contact from your Google account. Tap the suggestion to add it as the recipient.
- 4 Enter the email subject and compose the email text.
- 5 To add an attachment, tap .
- 6 Tap  at the top right of the screen to send the message.

## Replying to or Forwarding a Message

- 1 Open the Gmail message you want to reply to or forward.
- 2 You have the following options:
  - To reply, tap .
  - To reply to the sender and all recipients of the original message, tap .
  - To forward the message, tap .
- 3 Edit your message and tap .

## Accessing Gmail Settings

- 1 From your Gmail inbox, tap .
- 2 Scroll down and tap **Settings** to change **General settings**, which apply to all Gmail accounts, or other settings that only apply to specific accounts.

## Google Now

Find whatever you're looking for with Google Now. Google Now tailors your search options over time, learning your preferences, and making more accurate predictions for your needs. Google Now will also keep track of what you're doing and appear when you need it, like showing the next appointment on your calendar and what the traffic is like to get to it.

### Performing a Search

Press and hold . You can type in search terms, or say "OK Google" to begin a voice search.

You will see results for your search. To search images, places, and more, tap an option on the bar at the bottom of the screen. For additional web results, simply scroll down the screen.

### Changing Search Settings

Open the Google app and tap  > **Settings** to set Google Now, phone search options, voice recognition and output settings, and to change privacy settings for your account.

## Google+

Tap  > **APPS** > **Google+**. After signing in to your Google account, you can connect with friends and family on Google+.

Google+ allows you to set up circles of people to organize them into groups for sharing content. You can create hangouts for group or 1-on-1 chats, upload photos and videos, and much more.

## Maps

Tap  > **APPS** > **Maps**. Google Maps helps you find your location, local businesses, explore unfamiliar places, and get directions to your destinations.

## Play Store

Tap  > **Play Store**. Google Play Store gives you access to thousands of free and paid apps, games, books and magazines, music, movies, and TV programs.

### Navigating Play Store

In the Play Store, there are multiple ways to search for apps, games and more.

- Tap a category to browse popular apps, games, movies, and more, organized by popularity or category.
- Tap  to search the Play Store for a specific item, such as a game or app.
- To install an app, tap the app and follow instructions. Once installed, you will see a notification in the status bar. Open the app from this notification in the Notifications panel or by locating the app in the **APPS** tab of the home screen.

**NOTE:** You must set up a payment method, such as Google Wallet™, to purchase apps.

### Adding a Password

You can prevent unauthorized purchases from the Play Store by adding a password protection.

- ① Open the Play Store app and tap  > **Settings** > **Require authentication for purchases**.
- ② Tap the option you want to use, then enter the Google password and tap **OK**.

## Voice Search

Find what you're looking for by speaking your search terms into your device.

## YouTube

View videos and share your own with your friends, family, and the world.

## Settings

Tap  > **SETTINGS** to find all the tools for customizing and configuring your ZTE Spro 2. The **SETTINGS** app is divided into four categories: **Network**, **Device**, **System**, and **Projector**. See *Projection – Adjusting Projector Settings* for detailed projector options.

### Network Settings

#### Mobile Hotspot

Share your device's mobile data connection via Wi-Fi. See *Connecting to Networks and Devices – Sharing Your Mobile Data Connection – Sharing Your Mobile Data Connection as a Wi-Fi Hotspot*.

#### Airplane Mode

Swipe the **ON/OFF** switch beside **Airplane mode** to turn airplane mode on or off. All transmitted data are turned off when airplane mode is on.

#### Wi-Fi

Turn Wi-Fi on or off and configure your Wi-Fi connections. See *Connecting to Networks and Devices – Connecting to Wi-Fi*.

When Wi-Fi is on, tap  > **Wi-Fi Direct** in the **Wi-Fi** menu to share data between two devices via Wi-Fi directly. See *Connecting to Networks and Devices – Using Wi-Fi Direct*.

#### Bluetooth

Turn *Bluetooth* on or off and configure your *Bluetooth* connections. See *Connecting to Networks and Devices – Connecting to Bluetooth Devices*.

#### File Share

Share files in the **FileShare** folder on the internal storage. See *Applications – File Share*.

## Mobile Networks

Control mobile data use, select mobile network and set access point names. See *Connecting to Networks and Devices – Connecting to Mobile Networks*.

### Data Usage

Tap the **ON/OFF** switch to turn on or off mobile data.

You can check how much data has been used during the time cycle you set, set mobile data limit and warning, see what app has been using mobile data, allow data roaming, or restrict background data for individual apps.

#### NOTES:

- Data usage is measured by your device, and data usage from your service provider may differ.
- Tap  > **Mobile Hotspots** to select Wi-Fi networks that are mobile hotspots. Data usage on recognized mobile hotspots will be restricted to avoid high mobile data bills.

### VPN

Tap  > **SETTINGS** > **Network** > **More...** > **VPN** to set up and connect to virtual private networks. See *Connecting to Networks and Devices – Connecting to Virtual Private Networks*.

### USB Tethering and Bluetooth Tethering

Tap  > **SETTINGS** > **Network** > **More...** and then check **USB tethering** or **Bluetooth tethering** to share your device's mobile data connection with PCs or other devices via USB or *Bluetooth*. See *Connecting to Networks and Devices – Sharing Your Mobile Data Connection: Sharing Your Mobile Data Connection via USB and Sharing Your Mobile Data Connection via Bluetooth*.

## Device Settings

### Sound

In Sound settings, you can adjust volumes, toggle sound and mute modes, set up notification ringtones, and turn on/off touch sounds or screen lock sounds.

You can also turn on silent mode by pressing the **Volume Down Button** when no media file is being played until  appears in the status bar. When mute mode is on, all sounds except media are turned off.

### Display

- **Brightness:** Set the brightness of the display.
- **Wallpaper:** Select a background image for the lock screen.
- **Auto-rotate screen:** Allow your ZTE Spro 2 to automatically change the orientation of some on-screen content based on the position of the device.
- **Sleep:** Set the length of time of inactivity before the screen turns off automatically.
- **Font size:** Set the font size of the text on the screen.
- **Pulse notification light:** Turn on the LED indicator light to notify you of new events, such as the arrival of a new Gmail messages.
- **Touch key light duration:** This feature lets you control the backlight of the touch keys (the **Home Key**, the **Back Key**, and the **Menu Key**). Set the backlight duration to one of the following:
  - **Last 2 seconds/Last 5 seconds:** The touch keys light for 2 or 5 seconds each time you touch the screen or touch keys while the screen is turned on.
  - **Always on:** Keep the touch keys' backlight on while the screen is turned on.
  - **Always off:** Turn off the touch keys' backlight.
- **Power key light:** Enable or disable the backlight beneath the **Power Button**.

### Storage

Check memory information for your internal storage and the microSD card as well as the USB device when they are available.

You can choose the default location for new data, such as files downloaded and voice recordings. Tap **Save location** and select **Device** or **SD card** to store items in the internal storage or the installed microSD card.

Tap **Unmount SD card** to unmount the microSD card from your device so that you can safely remove the card while the device is on. Tap **Erase external SD card** to delete all data on the microSD card.

### Battery

Check how much power the battery has left and what apps are using the most battery power.

You can tap an app to adjust its settings in order to save battery life.

### USB Mode

Select your USB connection type between your ZTE Spro 2 and PC. See *Connecting to Networks and Devices – Connecting to Your Computer via USB – Connecting Your ZTE Spro 2 Smart Projector to a Computer via USB*.

### Accounts

Manage your accounts and synchronization. Tap **Add account** to sign in or create accounts on your ZTE Spro 2.

Tap an added account type to see the accounts of that type you have added and adjust the account type's settings.

## System Settings

### Apps

View and manage apps installed on your ZTE Spro 2.

Tap an app in the **DOWNLOADED**, **RUNNING**, or **ALL** tab to see its information. You can stop the app, uninstall or disable the app, or clear data and cache.

### Location

To use location-related applications, such as finding your location on Google Maps, you must have location services turned on on your device.

- 1 Tap  > **SETTINGS** > **System** > **Location**.
- 2 Slide the **Location** switch at the top to turn location services on or off.

### Security

- **Screen lock:** Disable the screen lock or enable it with long press, pattern, PIN, or password.
- **Make pattern visible:** Show the pattern as you draw it. This option is available when unlock pattern is set.
- **Automatically lock:** Set the time needed for the lock protection to be activated after the screen turns off. This option is available when unlock pattern, PIN or password is set.
- **Power button instantly locks:** Lock protection is activated immediately when you press the **Power Button**. This option is available when unlock pattern, PIN or password is set.
- **Owner info:** Set the text that you may display on the lock screen.
- **Encrypt device:** Encrypt your data on the ZTE Spro 2 to protect your privacy.
- **Set up SIM card lock:** Require a PIN to use device.
- **Make passwords visible:** Display passwords as you enter them.

- **Device administrators:** View or deactivate apps you have authorized to be device administrators.
- **Unknown sources:** Check this option to permit installation of apps from sources other than the Play Store.
- **Verify apps:** Disallow or display a warning before you install applications that may cause harm.
- **Storage type:** Check the credential storage type.
- **Trusted credentials:** Display trusted CA certificates.
- **Install from SD card:** Install certificates from the microSD card.
- **Clear credentials:** Delete all certificates.

### Backup & Reset

- **Back up my data:** Back up app data, Wi-Fi passwords, and other settings to Google servers after you sign in to your Google account.
- **Backup account:** Set the Google account that the data is backed up to.
- **Automatic restore:** Restore previously backed up settings and data when you reinstall an app.
- **Factory data reset:** Reset your ZTE Spro 2 to factory default settings. All your personal data on the internal storage will be erased. You can also erase the data on the microSD card during the process.

### Language & Input

- **Language:** Select a language.
- **Spell checker:** Use Android spell checker to check for spelling errors when entering text.
- **Personal dictionary:** Add new words to the device's dictionary or remove words from the dictionary. The words you add are used for spelling check and word suggestion.
- **KEYBOARD & INPUT METHODS:** Configure text input settings.

#### • **Voice Search:**

- **Languages:** Select the language you use when entering text by speaking or searching by speaking.
- **“Ok Google” detection:** When this is enabled, you can say “OK Google” when using the Google app rather than tapping the microphone icon to initiate a voice search or action.
- **Hands-free:** Allow voice search and spoken notifications with the device locked.
- **Speech output:** Control when the device should output speeches.
- **Offline speech recognition:** Download one or more additional language packages so you can use speech recognition when you do not have a network connection.
- **Block offensive words:** Hide offensive words when you use Google voice typing to transcribe your voice into text.
- **Bluetooth headset:** Listen for your voice input through a *Bluetooth* headset when it is connected to your device.

#### • **Text-to-speech output:**

- **PREFERRED ENGINE:** Select the speech synthesis engine you want to use or change its settings.
- **Speech rate:** Select how quickly you want the synthesizer to speak.
- **Listen to an example:** Play a brief sample of the speech synthesizer, using your current settings.
- **Default language status:** Check whether the text-to-speech output feature supports the current system language.
- **Pointer speed:** Select how fast the pointer/mouse should scroll when you connect the ZTE Spro 2 to a trackpad or mouse accessory.

## **Date & Time**

Set date, time, time zone, and how date and time are displayed. You can also use network-provided data.

## **Accessibility**

Configure accessibility plug-ins on your ZTE Spro 2, such as using **TalkBack** for low-vision users.

## **AT&T Software Update**

Check for available updates for AT&T software installed on your device and manage the update process.

## **About Device**

View the device status, legal information and other information. You can also update your system with an update package copied to the microSD card.

## For Your Safety

### General Safety

	Your device can produce a loud sound.		Don't use at gas stations.
	Avoid contact with anything magnetic.		Your device may produce a bright or flashing light.
	Keep away from pacemakers and other electronic medical devices.		Don't dispose of your device in fire.
	Turn off when near explosive materials or liquids.		To prevent possible hearing damage, do not listen at high volume levels for long periods.
	Only use approved accessories.		Avoid extreme temperatures.
	Don't take your device apart.		Avoid contact with liquids. Keep your device dry.

### Radio Frequency (RF) Energy

This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States.

During SAR testing, this device is set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage against the head with no separation, and near the body with the separation of 10 mm. Although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

The exposure standard for wireless devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.

Tests for SAR are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

The FCC has granted an Equipment Authorization for this model device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model device is on file with the FCC and can be found under the Display Grant section of [www.fcc.gov/oet/ea/fccid](http://www.fcc.gov/oet/ea/fccid) after searching on **FCC ID: SRQ-MF97B**.

For this device, the highest reported SAR value for usage near the body is **1.421 W/kg**. The highest reported SAR value for simultaneous transmission is 1.48 W/kg.

While there may be differences between the SAR levels of various devices and at various positions, they all meet the government requirement.

SAR compliance for body operation is based on a separation distance of 15 mm between the unit and the human body. Carry this device at least 15 mm away from your body to ensure RF exposure level compliant or lower to the reported level. To support body-worn operation, choose the belt clips or holsters, which do not

contain metallic components, to maintain a separation of 15 mm between this and your body.

RF exposure compliance with any body-worn accessory, which contains metal, was not tested and certified, and use such body-worn accessory should be avoided.

Operations in the band 5.15-5.25 GHz are restricted to indoor use only.

## FCC Regulations

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications not expressly approved by ZTE could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## Distraction

### Driving

Full attention must be given to driving at all times in order to reduce the risk of an accident. Using this device while driving can cause distraction and lead to an accident. You must comply with local laws and regulations restricting the use of wireless devices while driving.

### Operating Machinery

Full attention must be given to operating the machinery in order to reduce the risk of an accident.

## Product Handling

### General Statement on Handling and Use

You are responsible for how you use your device and any consequences of its use.

You must always switch off your device wherever the use of your device is prohibited. Use of your device is subject to safety measures designed to protect users and their environment.

- Always treat your device and its accessories with care and keep it in a clean and dust-free place.
- Keep the screen and projection lens clean. Dirty screen or projection lens may slow down the device's reaction to your operations or lower projection image quality.
- Clean your device and its accessories with a soft material such as cleaning cloth, or microfiber. Do not use alcohol or other corrosive substances for cleaning or allow them to get inside.

- Do not expose your device or its accessories to open flames or lit tobacco products.
- Do not expose your device or its accessories to liquid, moisture or high humidity.
- Do not drop, throw or try to bend your device or its accessories.
- Do not use harsh chemicals, cleaning solvents, or aerosols to clean the device or its accessories.
- Do not paint your device or its accessories.
- Do not attempt to disassemble your device or its accessories.
- Do not expose your device or its accessories to extreme temperatures. The operation temperature range for the device is minimum 23°F and maximum 104°F (minimum – 5°C and maximum + 40°C).
- Do not place your device inside or near heating equipments or high pressure containers, such as water heaters, microwave ovens, or hot cooking utensils. Otherwise, your device may be damaged.
- Please check local regulations for disposal of electronic products.

## Children

Do not leave your device and its accessories with your young children alone. The device is not a toy. They might accidentally damage the device. The projection light may cause discomfort to them or others without parents' direction.

The device contains small parts that may cause an injury or may become detached and create a choking hazard.

## Demagnetization

To avoid the risk of demagnetization, do not allow electronic devices or magnetic media close to your device for a long time.

## Air Bags

Do not place a device in the area over an air bag or in the air bag deployment area as an airbag inflates with great force and serious injury could result.

## Seizures/Blackouts

The device can produce a bright or flashing light. A small percentage of people may be susceptible to blackouts or seizures (even if they have never had one before) when exposed to flashing lights or light patterns such as when playing games or watching video. If you have experienced seizures or blackouts or have a family history of such occurrences, please consult a physician. To reduce the risk of blackouts or seizures, you can use your device in a well lit room and take frequent breaks.

## Repetitive Strain Injuries

To minimize the risk of Repetitive Strain Injury (RSI) when texting or playing games with your device:

- Do not grip the device too tightly.
- Press the buttons lightly.
- Use the special features which are designed to minimize the times of pressing buttons, such as Predictive Text.
- Take lots of breaks to stretch and relax.

## Loud Noise

This device is capable of producing loud noises, which may damage your hearing. Turn down the volume before using headphones, *Bluetooth* stereo headsets or other audio devices.

## Device Heating

Your device may become warm during charging and during normal use.

## *Electrical Safety*

### **Accessories**

Use only approved accessories.

Do not connect with incompatible products or accessories.

### **Faulty and Damaged Products**

Do not attempt to disassemble the device or its accessory.

Only qualified personnel can service or repair the device or its accessory.

If your device or its accessory has been submerged in water, punctured, or subjected to a severe fall, do not use it until you have taken it to be checked at an authorized service center.

## *Radio Frequency Interference*

### **General Statement on Interference**

Care must be taken when using the device in close proximity to personal medical devices, such as pacemakers and hearing aids.

Please consult your doctor and the device manufacturer to determine if operation of your device may interfere with the operation of your medical device.

### **Pacemakers**

Pacemaker manufacturers recommend that a minimum separation of 15 cm be maintained between a wireless device and a pacemaker to avoid potential interference with the pacemaker. To achieve this, do not use this device near your pacemaker and do not carry it near the breast.

### **Hearing Aids**

People with hearing aids or other cochlear implants may experience interfering noises when using wireless devices or when one is nearby.

The level of interference will depend on the type of hearing device and the distance from the interference source, increasing the separation between them may reduce the interference. You may also consult your hearing aid manufacturer to discuss alternatives.

### **Medical Equipment**

Switch off your wireless device when requested to do so in hospitals, clinics or health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.

### **Aircraft**

Switch off your wireless device whenever you are instructed to do so by airport or airline staff.

Consult the airline staff about the use of wireless devices on board the aircraft.

### **Interference in Vehicles**

Please note that because of possible interference to electronic equipment, some vehicle manufacturers forbid the use of your device in their vehicles.

## *Explosive Environments*

### **Gas Stations and Explosive Atmospheres**

In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your device or other radio equipment.

Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

### **Blasting Caps and Areas**

Power off your device when in a blasting area or in areas posted power off "two-way radios" or "electronic devices" to avoid interfering with blasting operations.

## Projector Light Troubleshooting

The types of notification message for actions and status are listed in the table below.

Notification message	Status
Projector brightness will be adjusted to a lower level to avoid overheating.	The projector temperature is slightly higher than normal. Projector brightness has been adjusted to a lower level to avoid overheating.
WARNING: The projector light will be turned off in 5 min. to avoid overheating. Please contact ZTE customer service at (877) 817-1759 for help.	The projector has detected an issue with the projector light and cannot be turned on. The projector light has been turned off. Please contact ZTE customer service at (877) 817-1759 for help.
The projector light will be turned off in 5 min. to avoid overheating. We strongly recommend that you turn off the projector light now and let it cool down.	The battery temperature is higher than normal. The projector light has been turned off to avoid overheating. We strongly recommend that you leave the projector light off and let it cool down.
The projector light has been on for an extended period. We strongly recommend that you turn off the projector light and let it cool down.	The projector light has been on for long hours. If you dismiss the message, you can continue keeping the projector light on. However, we strongly recommend that you turn off the projector light off and let it cool down.

## Specifications

Handset specifications are shown in the following table.

Network Frequency	UMTS: 850/1900/2100 MHz LTE band 2/4/5/17/29
Operating System	Android 4.4.4 (KitKat)
Processor	2.0 GHz quad-core processor MSM8974
Display	5" LCD 1280 x 720 Touch Screen
Dimensions	5.3 x 5.2 x 1.2 in. (134 x 131 x 31 mm)
Weight	19.4 oz. (550 g)
Memory	2 GB RAM + 16 GB ROM Up to 64 GB microSD card
Connectivity	Bluetooth 4.0
Battery	6,300 mAh, nonremovable
Interface	3.5 mm Headset Jack, HDMI, USB, micro-SIM, microSD
Features	Projector, Wi-Fi 802.11 b/g/n, Google Maps, WPS Office, Gmail, YouTube, Hangouts, Chrome, Google+, Play Music, Voice Search

## Warranty

ZTE offers you a limited warranty that the enclosed subscriber unit and its enclosed accessories will be free from defects in material and workmanship for a period that expires one year from the date of sale of the Product to you, provided that you are the original end user purchaser of the Product and provided that your purchase was made from a supplier authorized by the Seller. Transfer or resale of a Product will automatically terminate warranty coverage with respect to that Product. This limited warranty is not transferable to any third party, including but not limited to any subsequent purchaser or owner of the Product. This limited warranty is applicable only to end users in the United States.

1. This product or phone is warranted for 12 (twelve) months from date of purchase.
2. For warranty service information, please call ZTE service number (877) 817-1759 (Toll Free). The manufacturer's website, <http://www.zteusa.com>, is also available for assistance.
3. This warranty only applies if the product has been used in accordance with the manufacturer's instructions under normal use and with reasonable care.
4. What this warranty does not cover:
  - a) Defects or damages resulting from the misuse of this product.
  - b) Defects or damages from abnormal use, abnormal conditions, improper storage, exposure to moisture, dampness or corrosive environments, unauthorized modifications, unauthorized repair, neglect, rough handling, abuse, accident, alteration, improper installation, incorrect voltage application, food or liquid spoilage, acts of God.
  - c) Normal wear and tear.
  - d) If the Product has been opened, modified or repaired by anyone other than a warranty service center or if it is repaired using unauthorized spare parts.
  - e) If the serial number or mobile accessory date code has been removed, erased, defaced, altered or are illegible in any way subject to sole judgment of ZTE.

## LIMITED WARRANTY

TO THE EXTENT PERMITTED BY APPLICABLE LAW, THIS LIMITED WARRANTY IS YOUR SOLE AND EXCLUSIVE REMEDY AGAINST ZTE AND ZTE'S SOLE AND EXCLUSIVE LIABILITY IN RESPECT OF DEFECTS IN PRODUCT. HOWEVER, THIS LIMITED WARRANTY SHALL NOT EXCLUDE NOR LIMIT ANY OF YOUR LEGAL (STATUTORY) RIGHTS UNDER THE APPLICABLE NATIONAL LAWS.

TO THE EXTENT PERMITTED BY APPLICABLE LAW ZTE DOES NOT ASSUME ANY LIABILITY FOR LOSS OF OR DAMAGE TO OR CORRUPTION OF DATA, FOR ANY LOSS OF PROFIT, LOSS OF USE OF PRODUCTS OR FUNCTIONALITY, LOSS OF BUSINESS, LOSS OF REVENUES OR LOSS OF ANTICIPATED PROFIT, INCREASED COSTS OR EXPENSES OR FOR ANY INDIRECT, OR SPECIAL OR CONSEQUENTIAL LOSS OR DAMAGE. TO THE EXTENT PERMITTED BY APPLICABLE LAW, ZTE'S LIABILITY SHALL BE LIMITED TO THE PURCHASE VALUE OF THE PRODUCT.

THE ABOVE LIMITATIONS SHALL NOT APPLY TO DEATH OR PERSONAL INJURY CAUSED BY DEFECT OF PRODUCT IN MATERIAL, DESIGN AND WORKMANSHIP.

## How to Get Warranty Service

To obtain warranty service, please call (877) 817-1759. Please have the following information available when you send your device in for repair:

- A valid Proof of Purchase
- Return address
- Daytime phone number or fax number
- Model #
- IMEI # (Look for the 15-digit IMEI # behind the battery of the device.)
- Complete description of the problem
- Transportation prepaid

## Other Warranty Programs

You may have other warranty programs with your purchase, such as warranty exchange. If so, please refer to equipment package or the original point of sale.

Devices purchased for use on AT&T's system are designed for use exclusively on AT&T's system. You agree that you won't make any modifications to the Equipment or programming to enable the Equipment to operate on any other system. A voice plan is required on all voice-capable devices, unless specifically noted otherwise in the terms governing your agreement. Some devices or plans may require you to subscribe to a data plan.

Your device is designed to make it easy for you to access a wide variety of content. For your protection, we want you to be aware that some applications that you enable may involve the location of your device being shared. For applications available through AT&T, we offer privacy controls that let you decide how an application may use the location of your device and other devices on your account. However, the AT&T privacy tools do not apply to applications available outside of AT&T. Please review the terms and conditions and the associated privacy policy for each location-based service to learn how location information will be used and protected. In addition, your AT&T device may be used to access the Internet and to download, and/or purchase goods, applications, and services from AT&T or elsewhere from third parties. AT&T provides tools for you to control access to the Internet and certain Internet content. These controls may not be available for certain devices which bypass AT&T controls.

AT&T may collect certain types of information from your device when you use AT&T services to provide customer support and to improve its services. For more information on AT&T's Privacy Policy, visit [att.com/privacy](http://att.com/privacy).

Service provided by AT&T Mobility. © 2016 AT&T Intellectual Property. All rights reserved. AT&T, the AT&T logo and all other AT&T marks contained herein are trademarks of AT&T Intellectual Property and/or AT&T affiliated companies. All other marks contained herein are the property of their respective owners.

Portions Copyright © 2016 ZTE CORPORATION. All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice. ZTE, Spro, and the ZTE logos are trademarks of the ZTE Corporation. Google and Android are trademarks of Google, Inc. The *Bluetooth*® trademark and logos are owned by the *Bluetooth* SIG, Inc. and any use of such trademarks by ZTE Corporation is under license. microSD logo is a trademark of SD-3C, LLC. Qualcomm® Snapdragon™ processors are products of Qualcomm Technologies, Inc. Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries. Used with permission. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories. DLP is the trademark of Texas Instruments. Other trademarks and trade names are the property of their respective owners.